

STORING AND HANDLING

1. Store the BAS Boards on a level ground. The BAS Boards must be supported for every 500 mm.
2. When picking up the BAS Boards do not drag them. Always lift them straight up.
3. The BAS Boards are always packed top to top on the pallet. Keep them stored the same way.








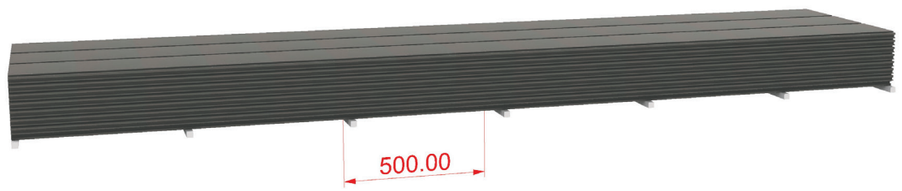

INSTALLATION GUIDE

SUBSTRUCTURE/


- Install a stable support frame.
- Joist/ support spacing must be maximum C-C 60 cm.
- Ensure the structure is level and well drained.
- For proper ventilation there must be an air gap of 20 mm underneath.
- The Substructure must be fixed with cossorion-resistant fasteners.

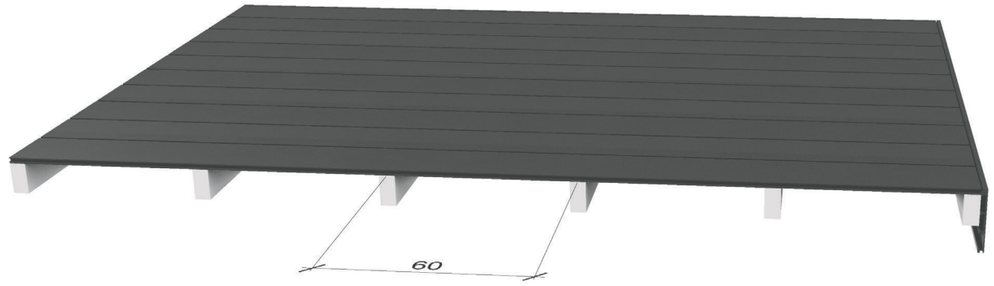


TOOLS AND HELPING AIDS/




Screwdriver

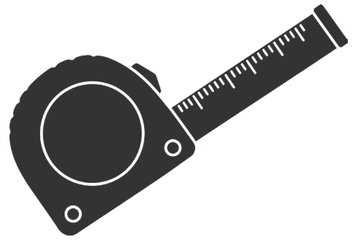

Measuring tape

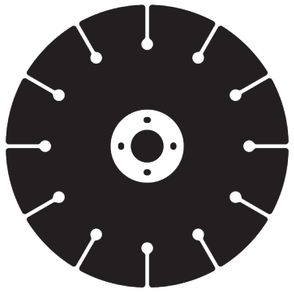

For Stone or Carbon

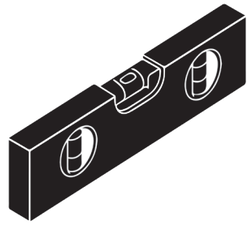

Bubble leveler



Montage extra glue

INSTALLATION GUIDE

BAS Board fasteners and finishing profile.




BAS Board clip



BAS Boards S Clip



BAS Board T-profile

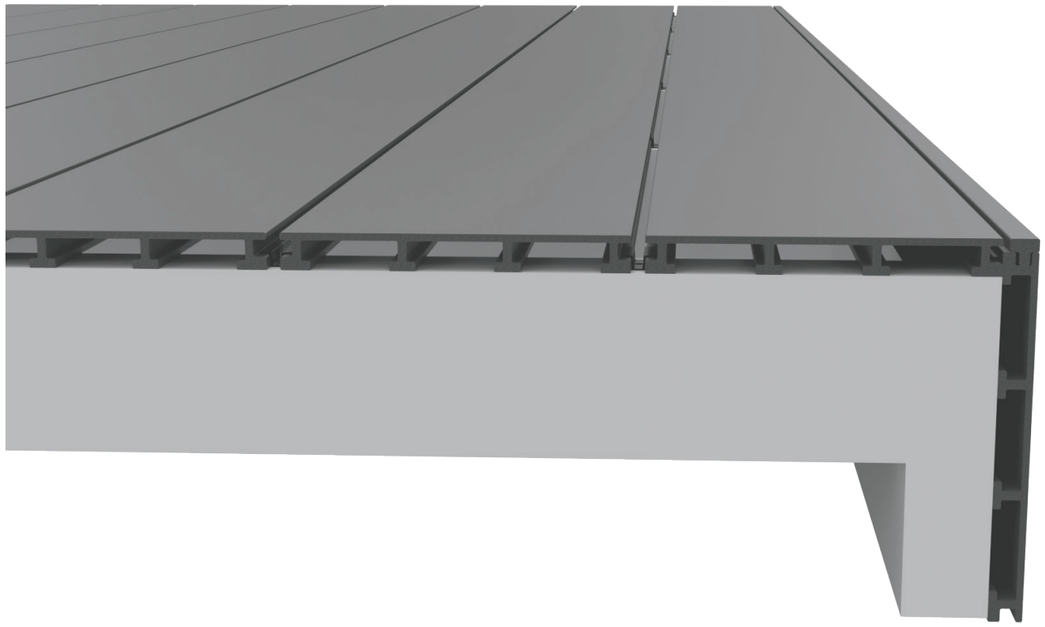

BAS Boards installed with Clips on frame with T-profile finish

INSTALLATION GUIDE - STEP BY STEP

1. Layout planning


Measure and plan the orientation of the boards.

Allow for 3-5 mm gap at the boards ends and edges.


2. First board installation

Position the first board at the desired starting point.

Use S Clip to anchor the board securely.

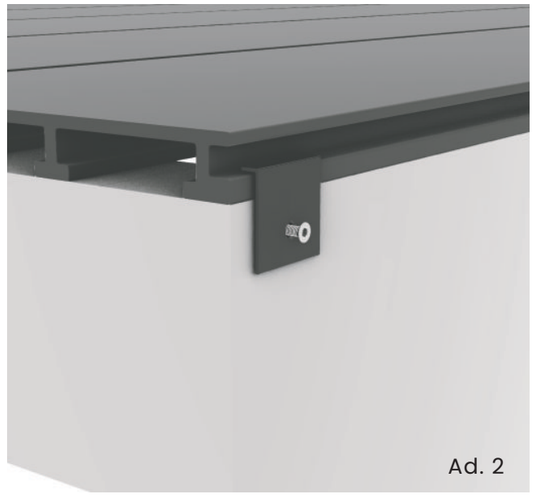

Ad. 2

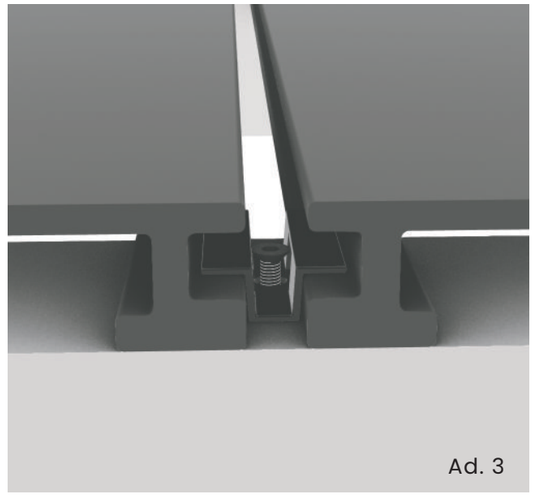

Ad. 3

3. Mounting with Clips

Place the BAS Boards Clip into the side groove of the board.

Secure the clips with the delivered stainless steel screws.

Make sure not to overtighten.

4. Continue installation

Slide the next board into the clips and press down gently.

Continue fastening each board in sequence using clips.

Fasten all screws once the last board has been fixated.

INSTALLATION GUIDE - STEP BY STEP

5. Corners and edges

Mount the T-profile around the edges and corners.


The T-profile has one-end pre cut in 45 degrees angle.

Make the corner by mounting to 45 degrees angles together.

Use "Montage extra" to install the T-profile.



Ad. 5a

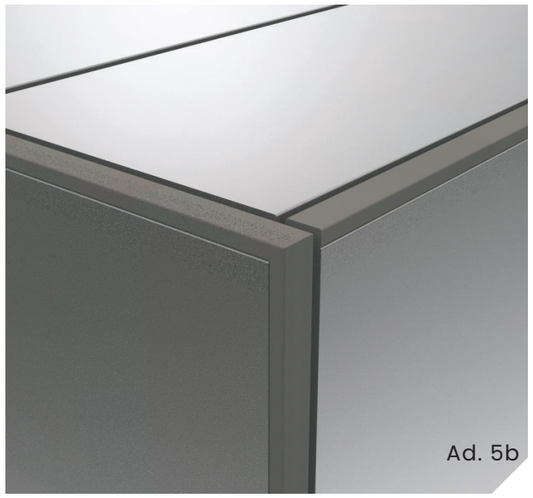

Ad. 5b

6. Maintenance

BAS Boards require no sealing, oiling or similar.

Clean with water and/ or high pressure washer(keep nozzle 30 away)

Ideal for long time exposure to salt, chlorine, sun and rain.

Disclaimer


Unknown Nordic's instructions are continuously improved, and Unknown Nordic reserves the right to change the installation instructions at any given time and without notice. It is the user's own responsibility to ensure that the guide is the latest available version at www.unknownnordic.com. Colors and texture may vary depending on light and weather conditions. For this reason, as well as due to limitations in printed reproductions, colors in this brochure may vary compared to the physically delivered product.









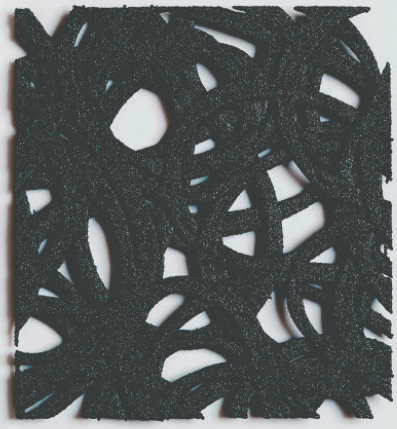



BAS
Construx
Danish Basalt Technology

BAS CONSTRUX

Industrivej 5

DK-5580 Nr. aaby

+45 28 96 28 37

mail@unknownnordic.com

www.basconstrux.com